

See <https://youtu.be/INOj5k-69js> for a video demo of the update process.

SETUP

1. Copy the file **femu.bin** to the root directory of your SD card.
2. Insert the SD card into your Floppy Emu, connect the Emu to your computer, and turn it on.

FIRMWARE UPDATE

1. Hold down the SELECT and PREV buttons.
2. Press and release the RESET button.
3. Continue holding SELECT and PREV until the firmware update process begins (about 1 second).
4. Wait 10-15 seconds for the process to complete. Status LED will be flashing.
5. When finished, the LCD will display self-test information, and the main menu.

Confirm the new firmware version number is displayed on the LCD during Floppy Emu startup.

Note: This is a unified firmware that combines the AVR and CPLD data into a single file. Unlike earlier firmware versions, there's no need to worry about separate Part 1 and Part 2 files.